

Update instructions

1. Format or delete all files on TF memory card for the mainboard.
2. Format or delete all files on SD memory card for the touchscreen.
3. Unzip “Mainboard.zip” and copy all files into TF memory card. (firmware.bin & config)
4. Unzip “Touchscreen.zip” and copy file and folder into SD memory card. (mks_config & mks_pic folder)
5. Insert TF memory card into mainboard.
6. Insert SD memory card into touchscreen.
7. Power on machine and wait for update to complete.
8. Redo Auto-Calibration.
9. Done.